


FABRIC ATTACHMENT DETAIL

NOT TO SCALE
SHALLOW WATER AREAS

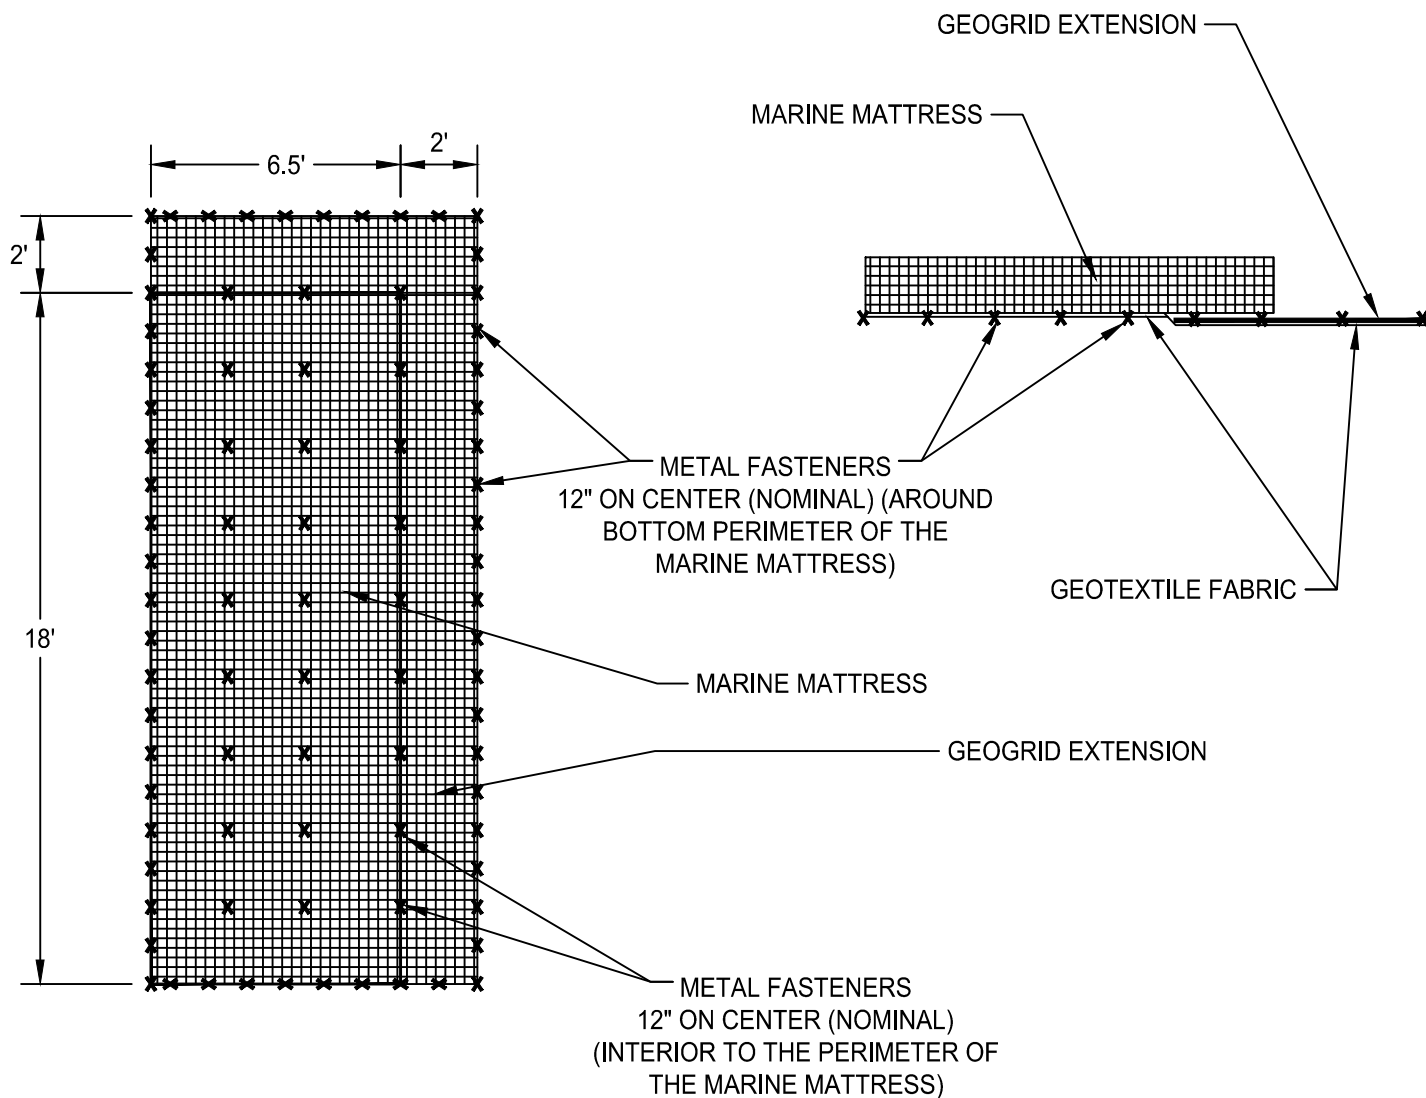

NOTES:

1. GEOTEXTILE FABRIC SHALL BE SECURELY ATTACHED TO THE BOTTOM OF EACH MATTRESS USING METAL FASTENERS ON 12" CENTERS AROUND THE PERIMETER OF THE MATTRESS.
2. GEOTEXTILE FABRIC SHALL BE SECURELY ATTACHED TO THE BOTTOM OF EACH MATTRESS USING METAL FASTENERS ON 24" CENTERS ACROSS THE BOTTOM WIDTH OF THE MATTRESS.
3. GEOTEXTILE FABRIC SHALL COVER THE BOTTOM OF THE MATTRESS AND THE 2' GEOGRID EXTENSION.
4. ANY SEAMS IN THE FABRIC SHALL BE OVERLAPPED BY 9" MINIMUM AND THERMALLY WELDED TO FORM A SECURE BOND BETWEEN THE ADJOINED PIECES.

FABATTACH.DWG